



If assistance is needed - do not contact the store! Call our customer services department on:


UK: 0115 985 3500

Hours: 9am to 5pm, Monday to Friday (except National Holidays).


WARNING

To ensure your safety, do not attempt to assemble the backboard combo set without reading and following all instructions carefully. Identify and check the parts list.

HANGING FROM THE RIM WILL DAMAGE THE UNIT, VOID THE WARRANTY AND RESULT IN PERSONAL INJURY.
THE PRODUCT IS NOT DESIGNED FOR THIS TYPE OF USE.

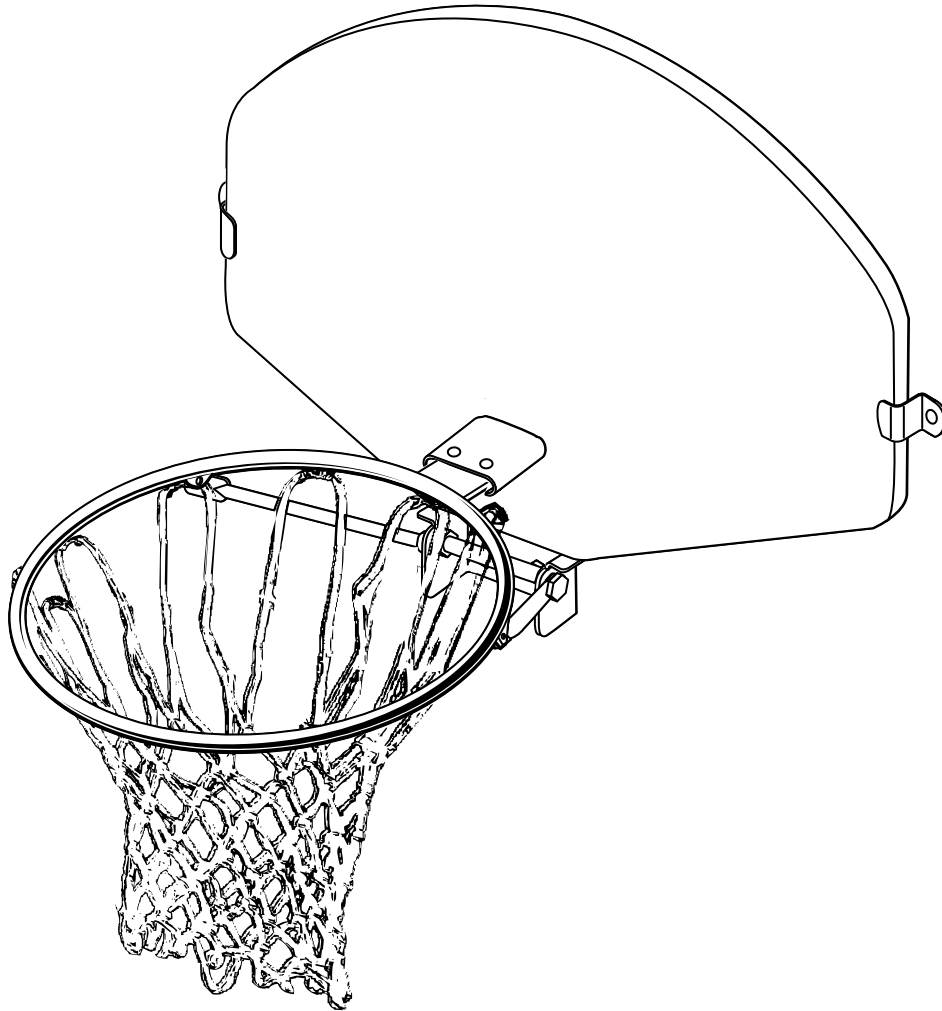

Pack contents




B

6 × M8 60 mm Expansion bolts (10mm Ø)




D

4 × M5 Nuts and bolts

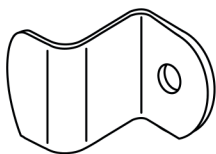


C

2 × Wall supports

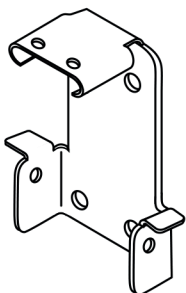

1 × Wall mount bracket

A

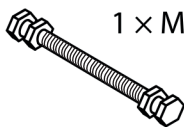


1 × M8 110mm Nut & Bolt

F




2 × Rim support arms

E

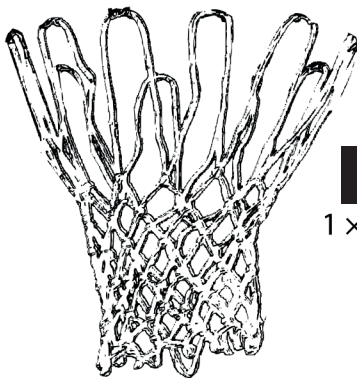


G

1 × Net

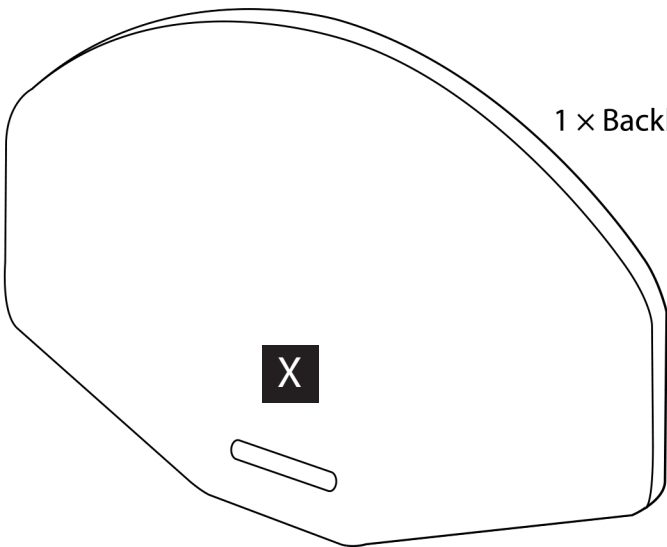

1 × Backboard

X

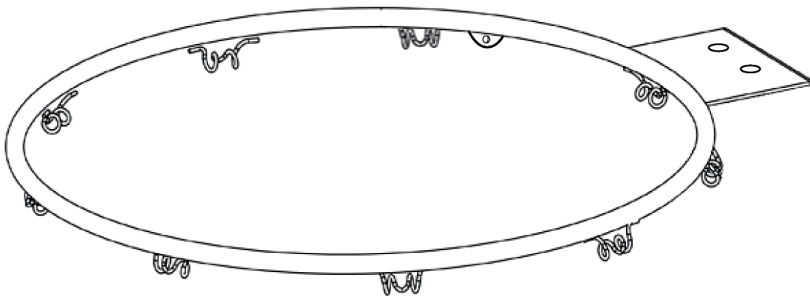


1 × Rim

H


Step 1: Securing the bracket to the wall

- 1) Locate the desired position for the backboard on the wall. Locate an area away from windows and obstructions. The wall surface should be flat and ideally be brick or of a smooth sound rendering. Undulating, uneven or porous surfaces are not suitable for this installation. If in doubt consult a qualified builder for advice. Normal playing height is 3.05 metres (10ft) from the top edge of the rim to the playing surface. For younger players a lower playing height is recommended.
- 2) Place the bracket (A) against the wall in the desired position. Check bracket A is square with a spirit level. Mark the four hole positions through the bracket with a marker pen.
- 3) Drill the 4 holes with an 10mm drill bit to a depth of 45mm to accomodate the four expanding bolts (B).
- 4) Insert the expanding bolts into the wall. The bolts should protrude 10mm. Once tightened in the next step, the bolts will protrude approximately 20mm from the wall surface.
- 5) Slide the bracket (A) into position and secure using the nuts and washers from part (B).

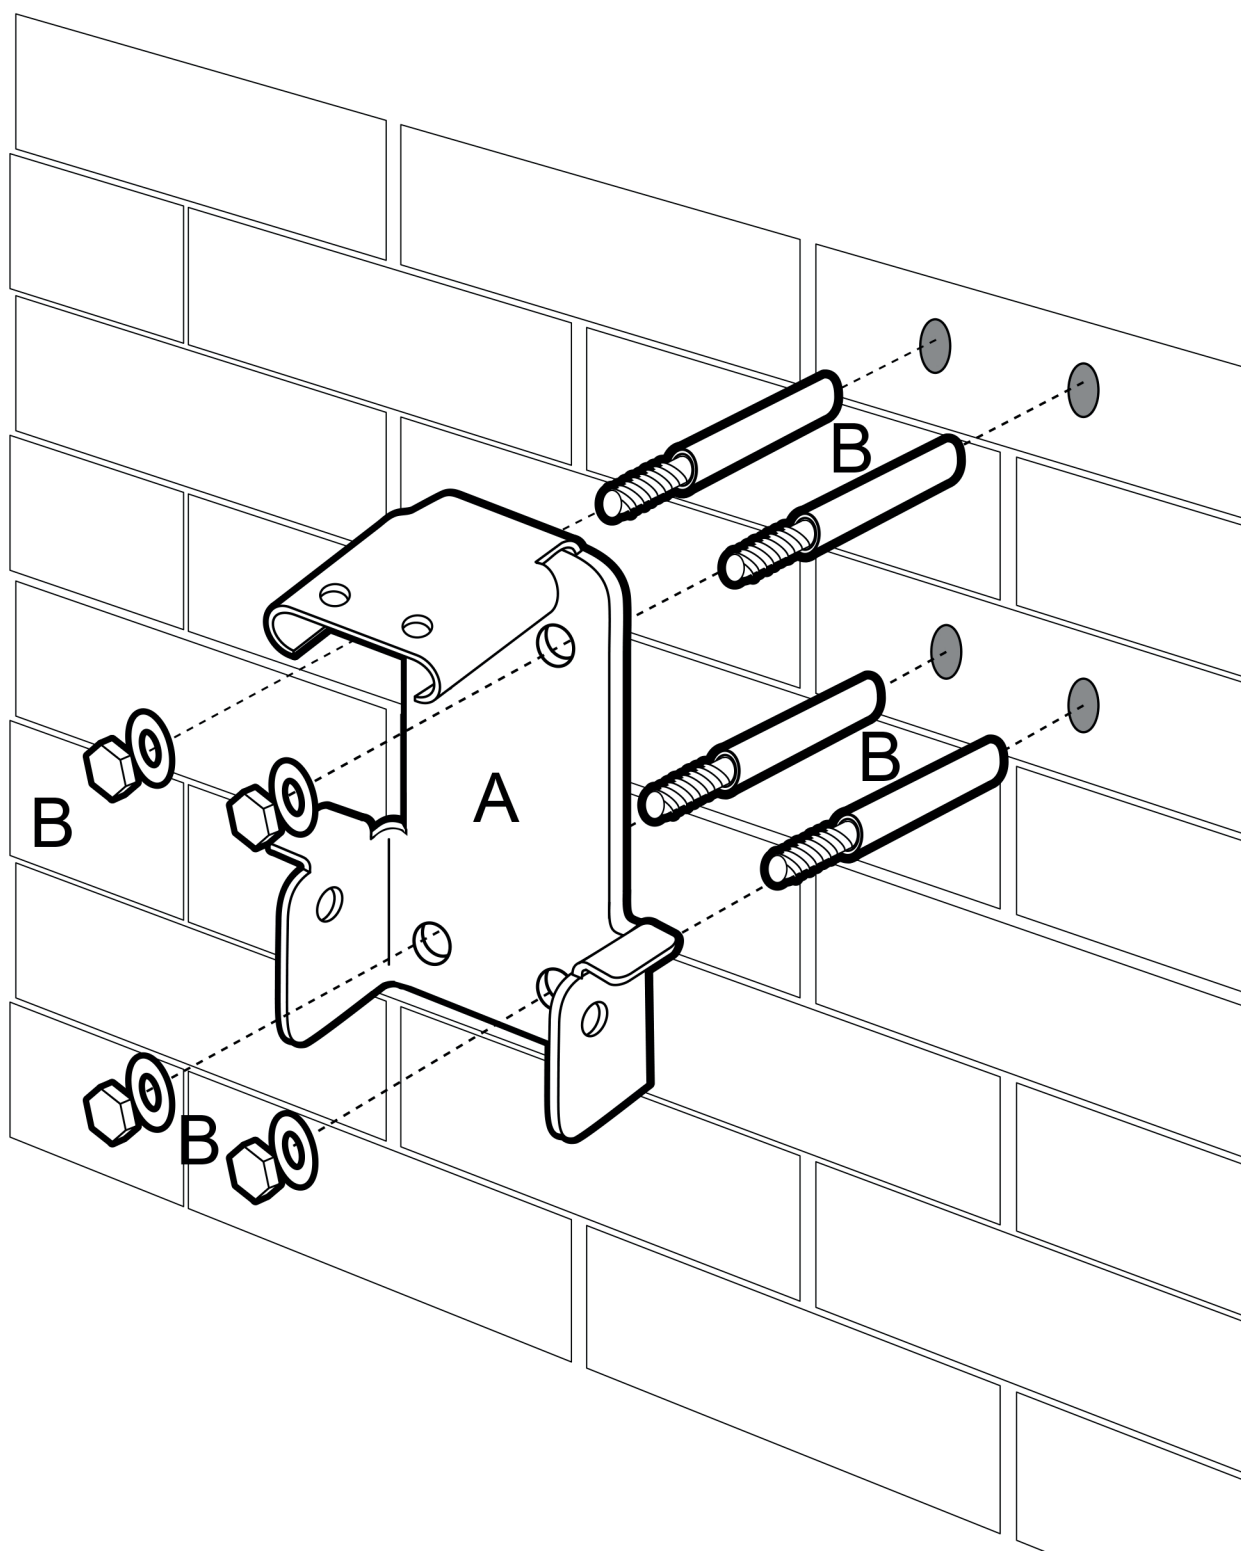


Step 2: Securing the backboard to the wall

- 1) Attached the backboard to the bracket by slotting into position so that the rim connector (A) slides through the slot (X). The backboard should rest on the bracket lips of part (A).
- 2) Position the wall brackets (C) on either side of the backboard and mark the hole positions through the bracket with a marker pen. Drill holes into the wall with a 10 mm drill bit. Insert two expanding bolts (B) into the wall.
- 3) Slide the bracket (C) into position and secure using the nuts and washers from part (B).

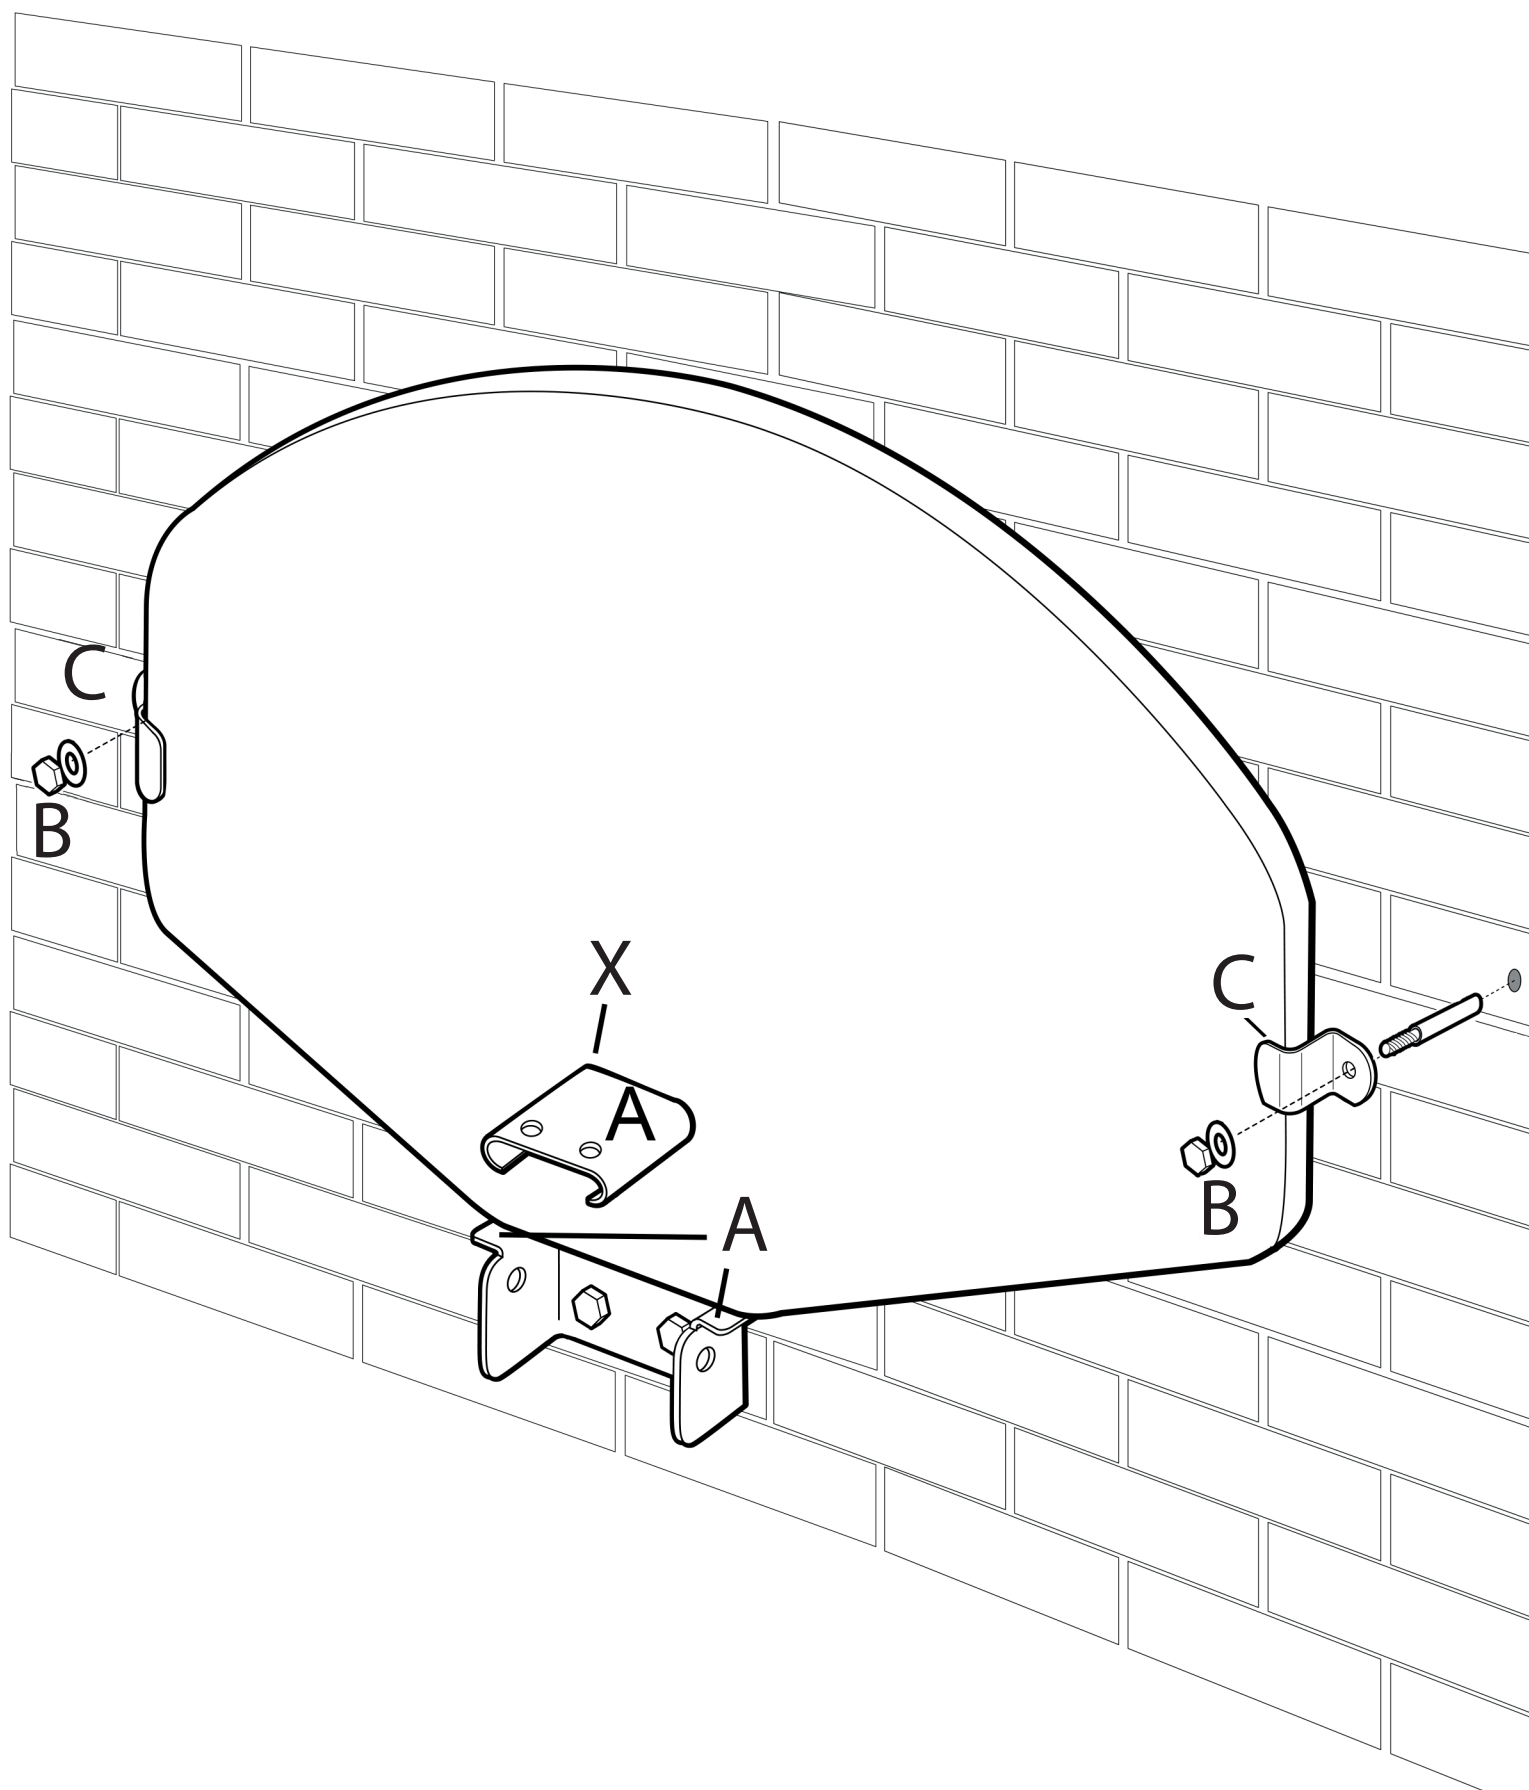



Step 3: Attaching the rim

- 1) Slide the rim into position and attach the rim to the wall bracket using two nuts and bolts (D).
- 2) Attach the rim support arms(E) to the rim using two nuts and bolts from part (D).

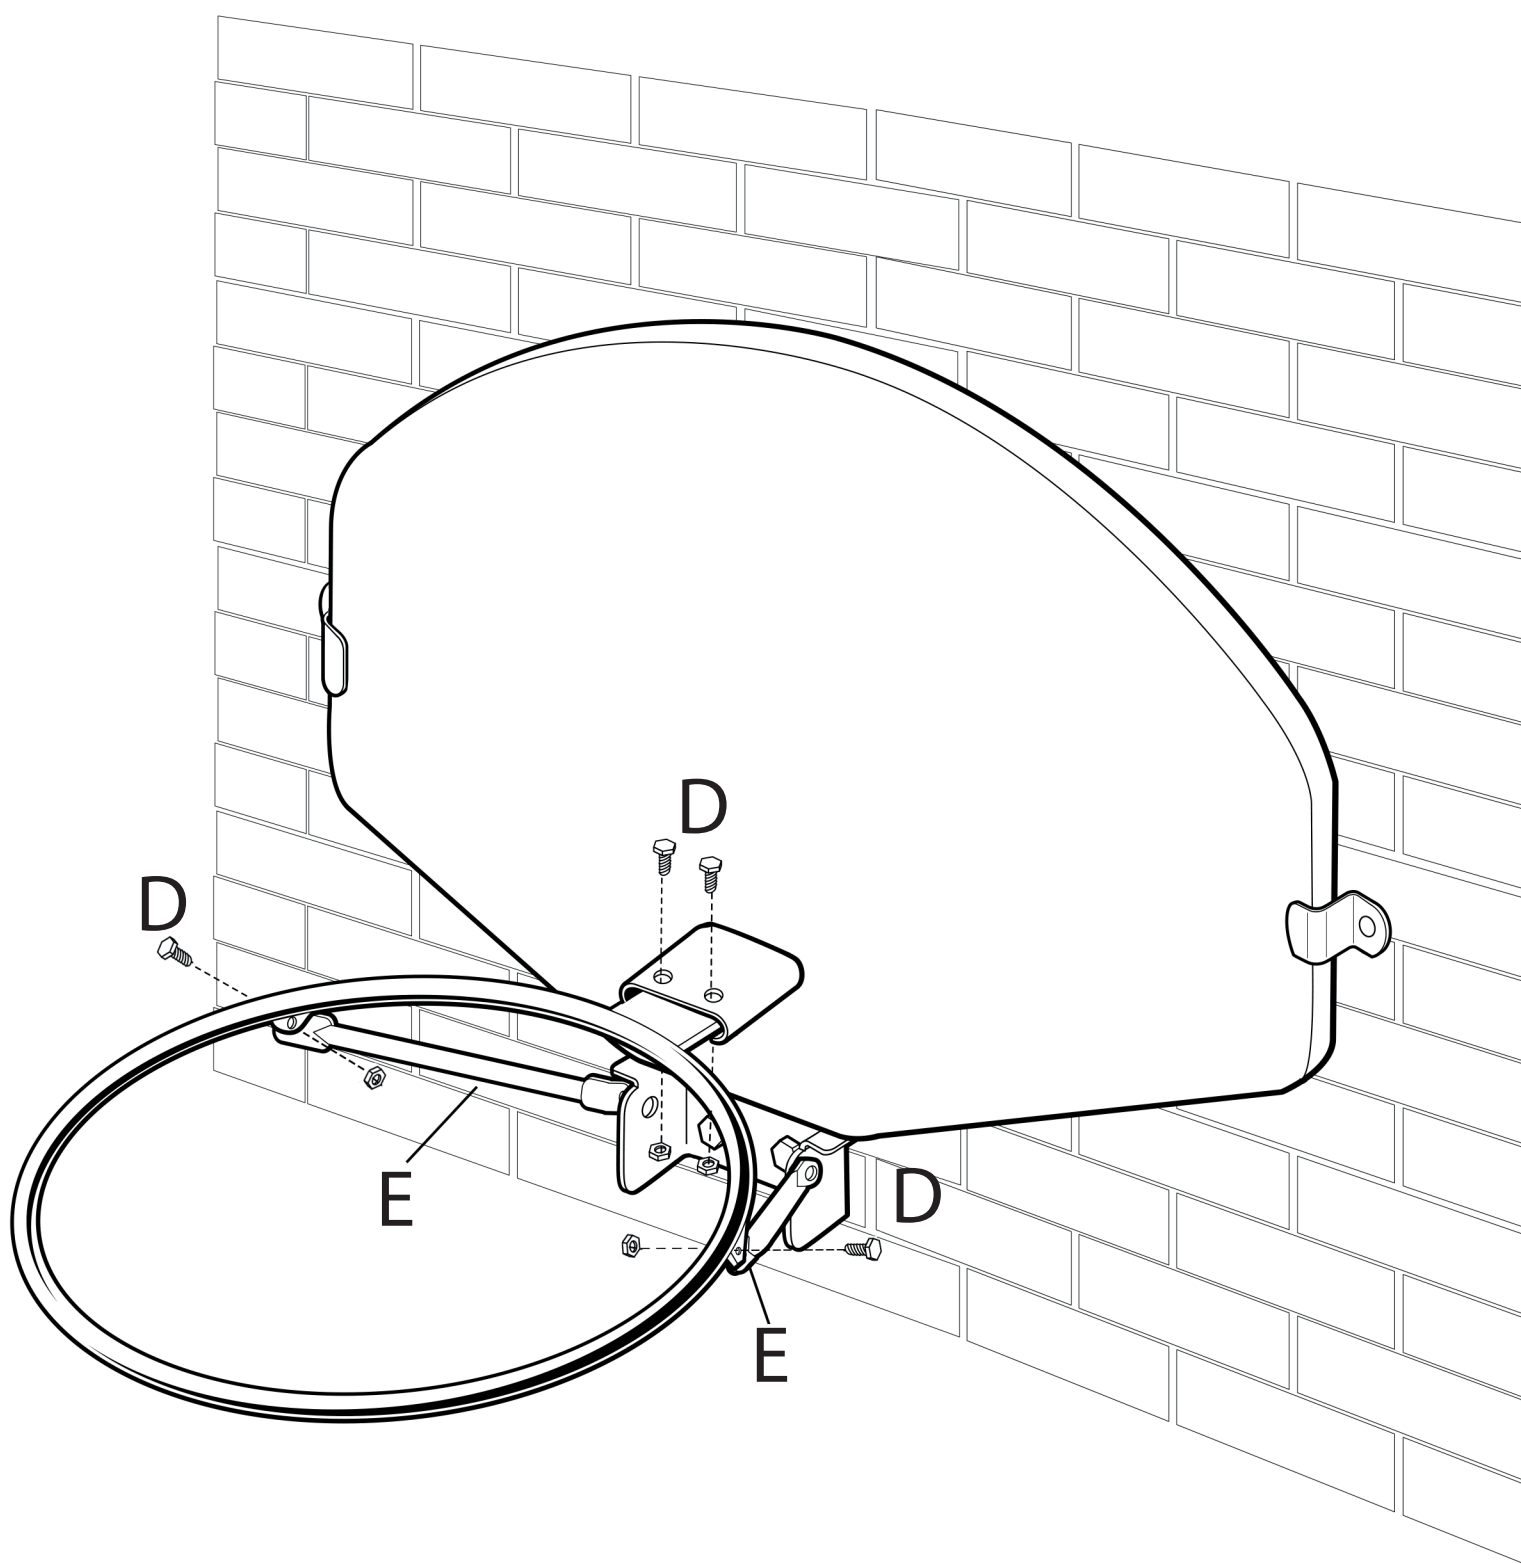

Step 4: Securing the rim arm supports


- 1) Secure the arms (E) to the wall bracket (A) by fixing nuts and bolt (F) through the holes as indicated below.

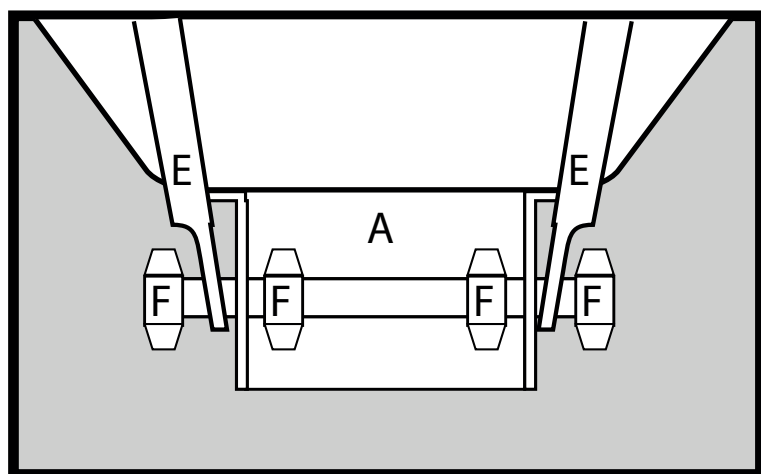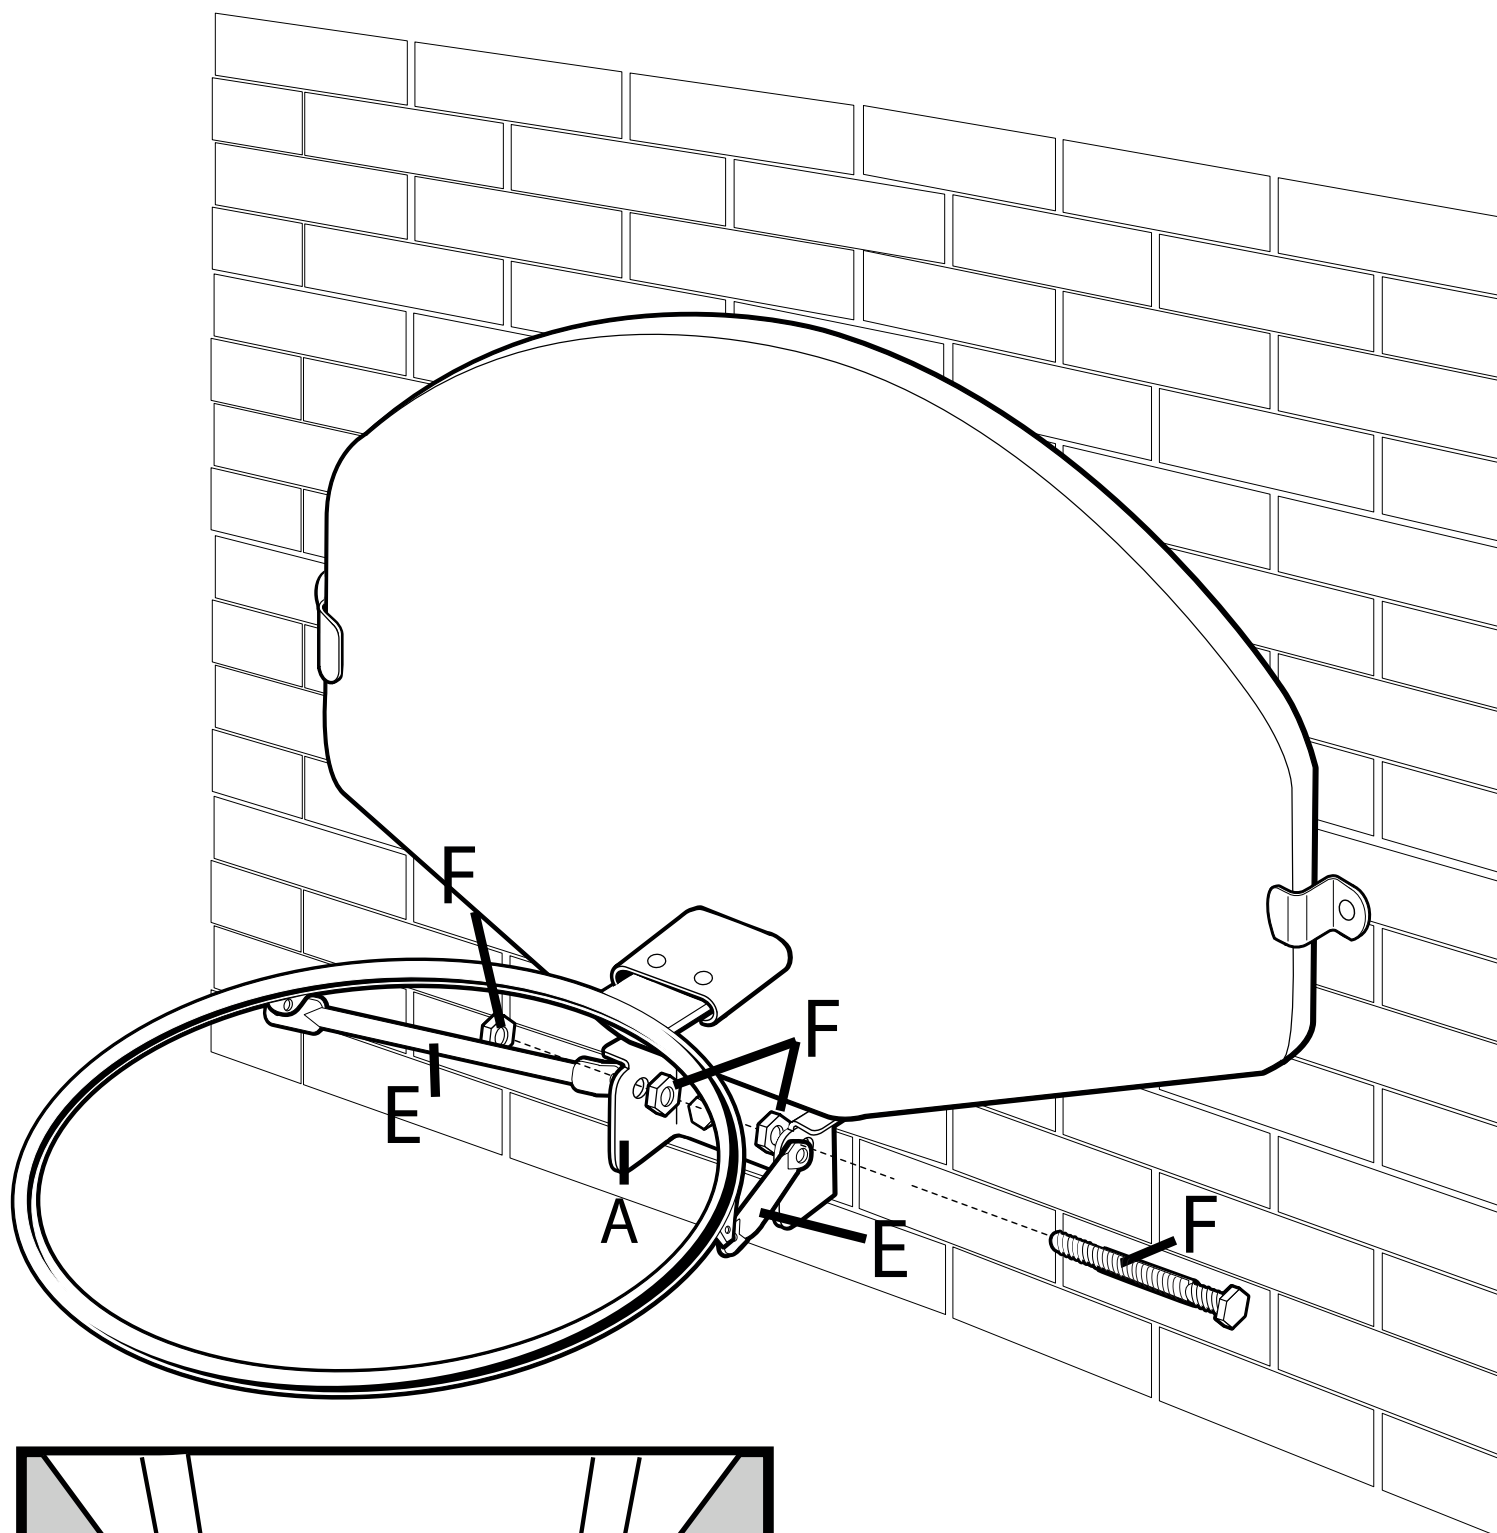

Step 2

Step 5: Attaching the net

1) Attach the net (G) to the net hooks (H) of the goal.

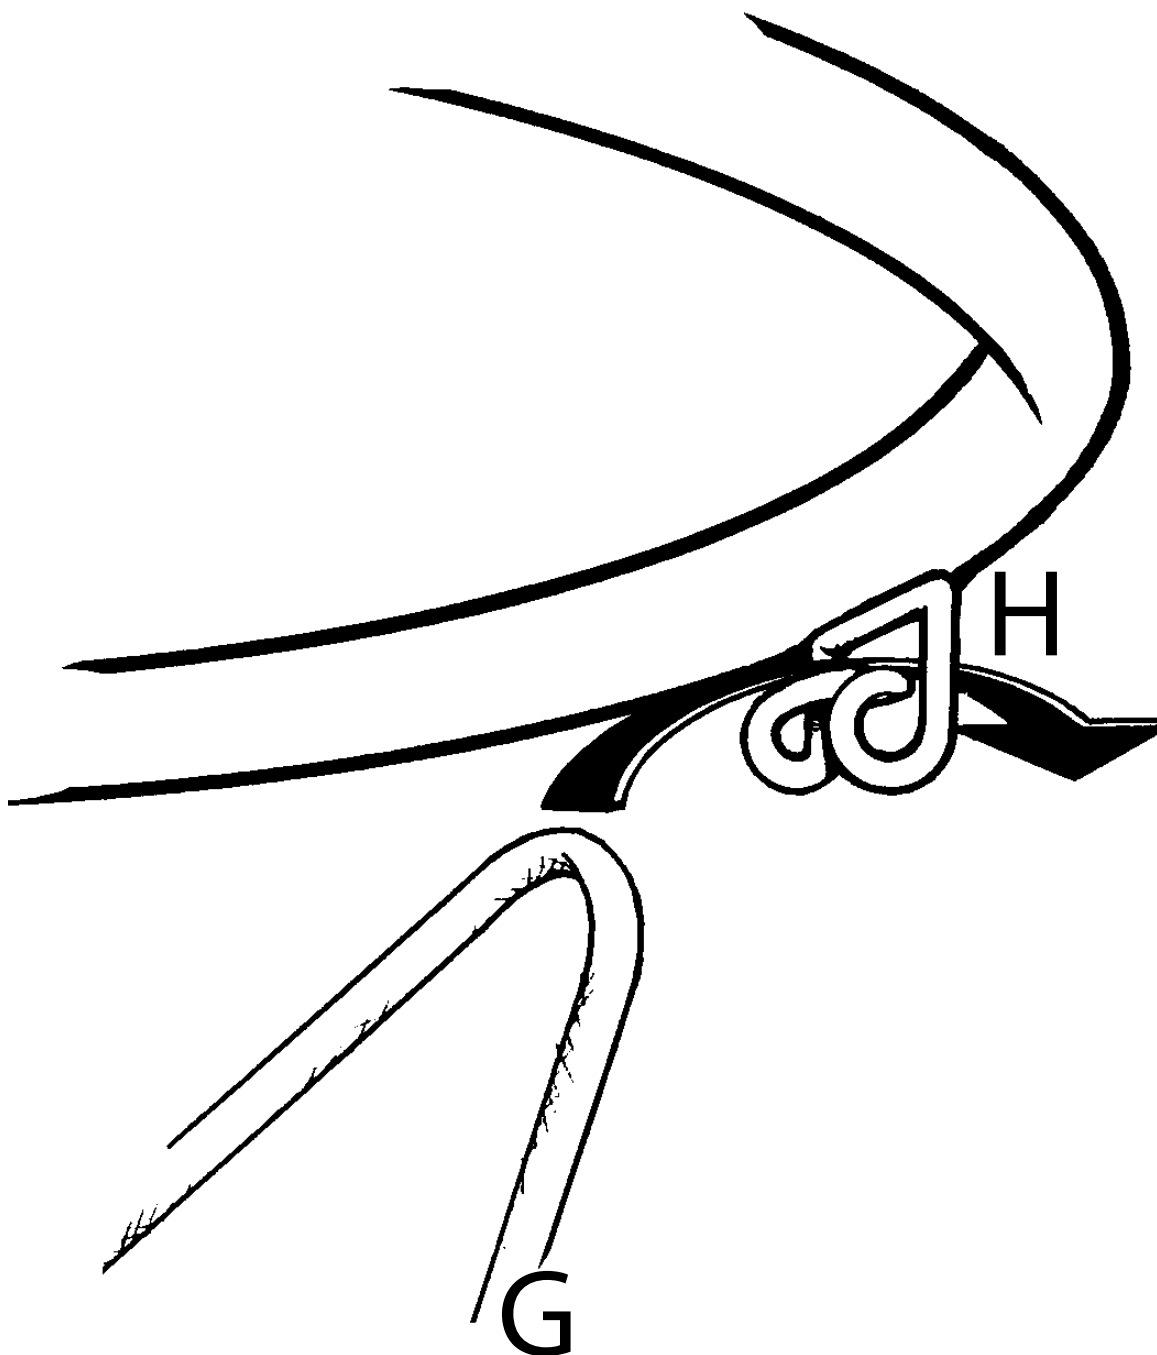

WARNING!

To ensure your safety, do not attempt to assemble the basketball system set without reading and following all instructions carefully.

Identify and check the parts using the parts list.

HANGING FROM THE RIM WILL DAMAGE THE UNIT, VOID THE WARRANTY AND RESULT IN PERSONAL INJURY. THE PRODUCT IS NOT DESIGNED FOR THIS TYPE OF USE.

REQUIRES ASSEMBLY BY AN ADULT.