


Vertical Backboard & Goal




If assistance is needed - do not contact the store! Call our customer services department on:
UK: 0115 985 3500
Hours: 9am to 5pm, Monday to Friday (except National Holidays).

WARNING


To ensure your safety, do not attempt to assemble the backboard combo set without reading and following all instructions carefully. Identify and check the parts list.
HANGING FROM THE RIM WILL DAMAGE THE UNIT, VOID THE WARRANTY AND RESULT IN PERSONAL INJURY.
THE PRODUCT IS NOT DESIGNED FOR THIS TYPE OF USE.

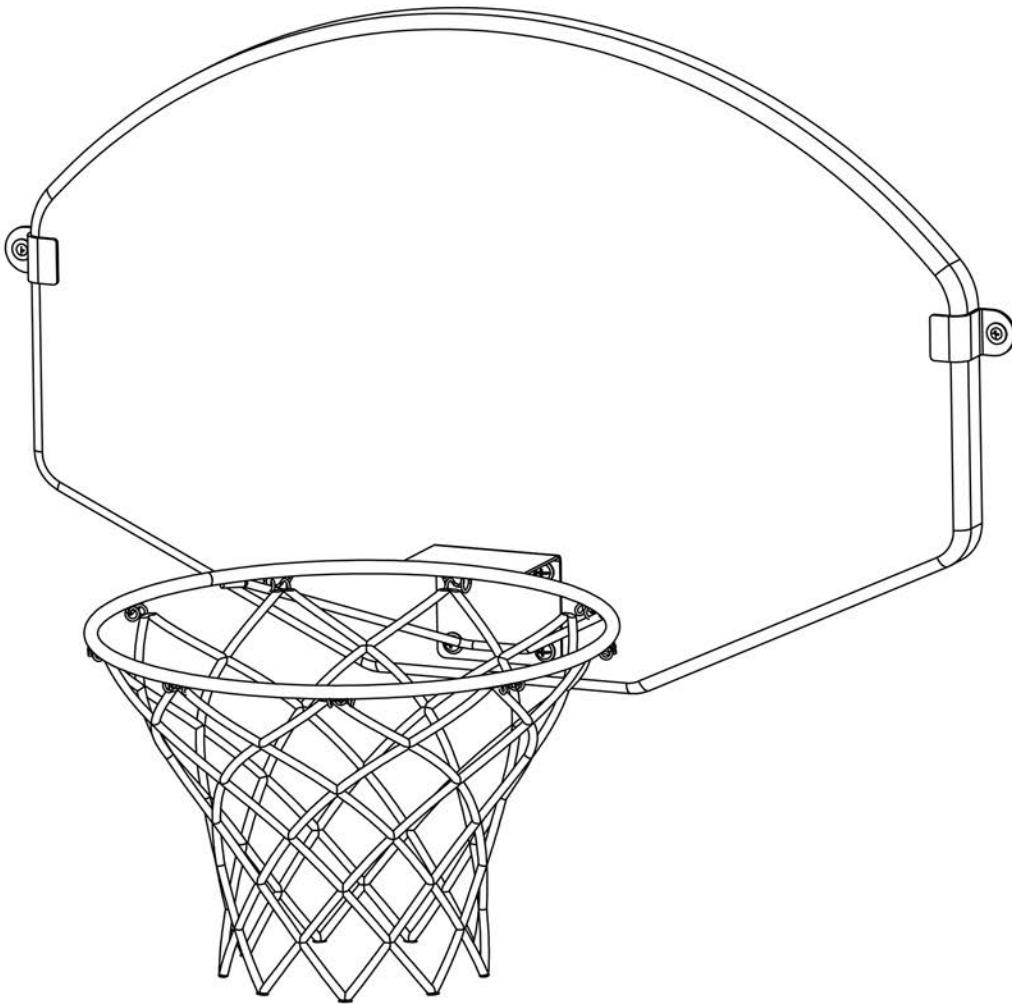


Pack contents

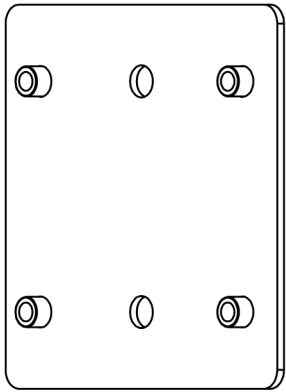


C 1 x Backboard bracket

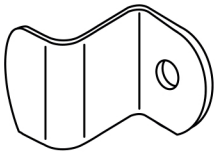


D 2 x Wall brackets




E 4 x 30mm Bolts




F 4 x Anchor bolts




G 4 x Washers

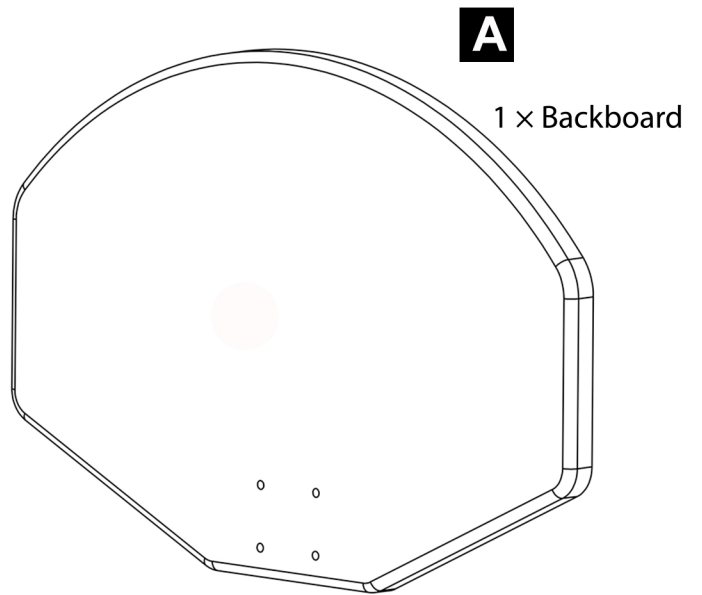

A
1 x Backboard

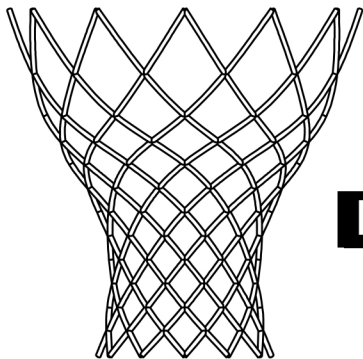

H 1 x Net

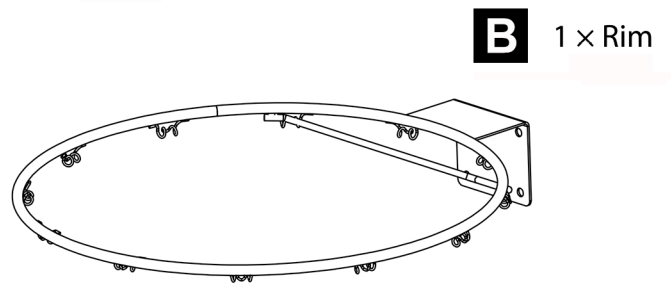

B 1 x Rim



WARNING: USE OF IMPACT WRENCHES AND POWER TOOL WRENCHES

PLEASE AVOID COMMON USE IMPACT & POWER TOOL WRENCH MISTAKES WHEN ASSEMBLING YOUR PORTABLE BASKETBALL OR NETBALL SYSTEM

We strongly advise against the use of powered tools and impact wrenches for assembling your portable basketball or netball system. However, if you do decide to use a powered impact wrench or power tool, you must use them the right way in order not to damage the equipment you are assembling. Two of the common mistakes which you can avoid when using a powered impact wrench or power tool are:

1. Over Tightening Fixings

The main issue is underestimating the amount of torque that a powered impact wrench and power tool is capable of delivering. In a bid to guarantee that the nut or screw is satisfactorily fixed, components can be easily over-tightened with the bolt head protruding beyond the locknut head. ***Exceeding the limit of the components can cause damage to the structure of the portable basketball or netball system and will void the warranty.***


*The best way to prevent over-tightening is to use powered impact wrenches **only** for removing or loosening a fitting. **For tightening the bolts and fasteners, we strongly recommend only using standard manual torque wrenches or spanners.***

2. Damaging Threads

If you use an impact wrench or power tool to tighten a nut or bolt that is cross-threaded, you may possibly end up damaging the threads further and irreparably so. ***The best way around avoiding this damage would be to manually thread the bolt using a standard manual torque wrench or spanner.***


Step 1: Securing the bracket to the wall

- 1) Locate the desired position for the backboard on the wall. Locate an area away from windows and obstructions. The wall surface should be flat and ideally be brick or of a smooth sound rendering. Undulating, uneven or porous surfaces are not suitable for this installation. If in doubt consult a qualified builder for advice. Normal playing height is 3.05 metres (10ft) from the top edge of the rim to the playing surface. For younger players a lower playing height is recommended.
- 2) Place the bracket (C) against the wall in the desired position. Check bracket C is square with a spirit level. Mark the four hole positions through the bracket with a marker pen.
- 3) Drill the 2 holes with an 10 mm drill bit to a depth of 45mm to accomodate two anchor bolts(F).
- 4) Insert the anchor bolts into the wall.
- 5) Place the bracket (C) into position and secure using 2 x anchor bolts (F).

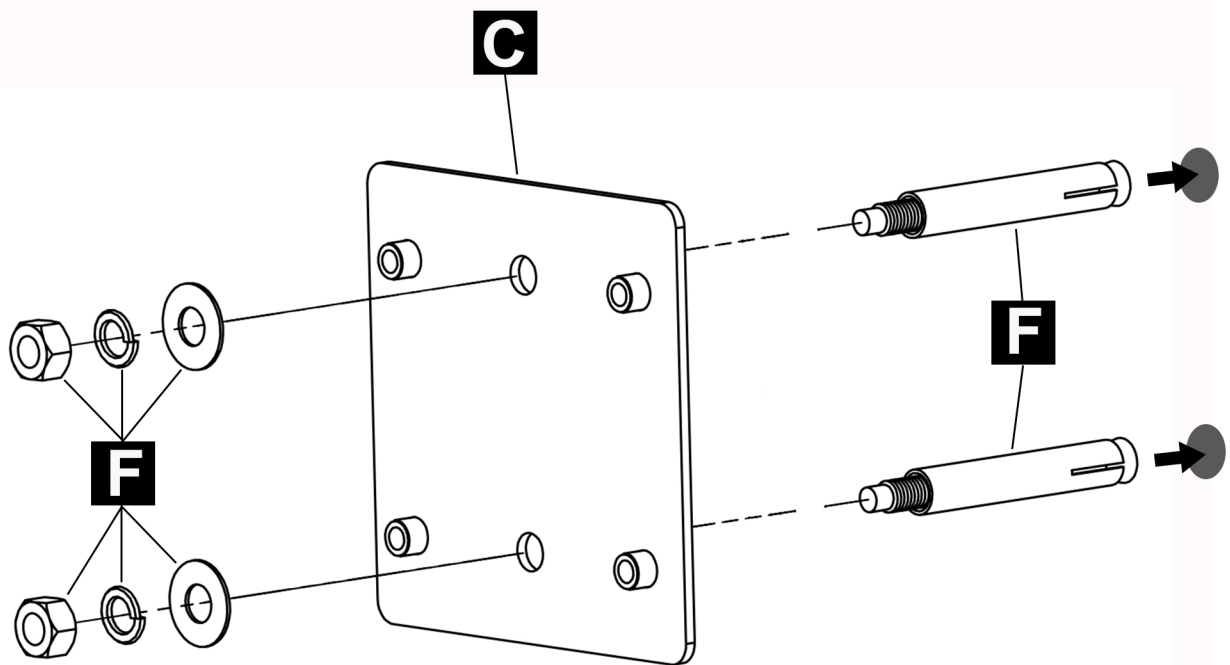


Step 2: Attaching the rim and backboard

- 1) Slide the backboard(A) into the backboard bracket(C) and attach the rim(B) to the backboard(A). Secure using four bolts(E) and washers(G).

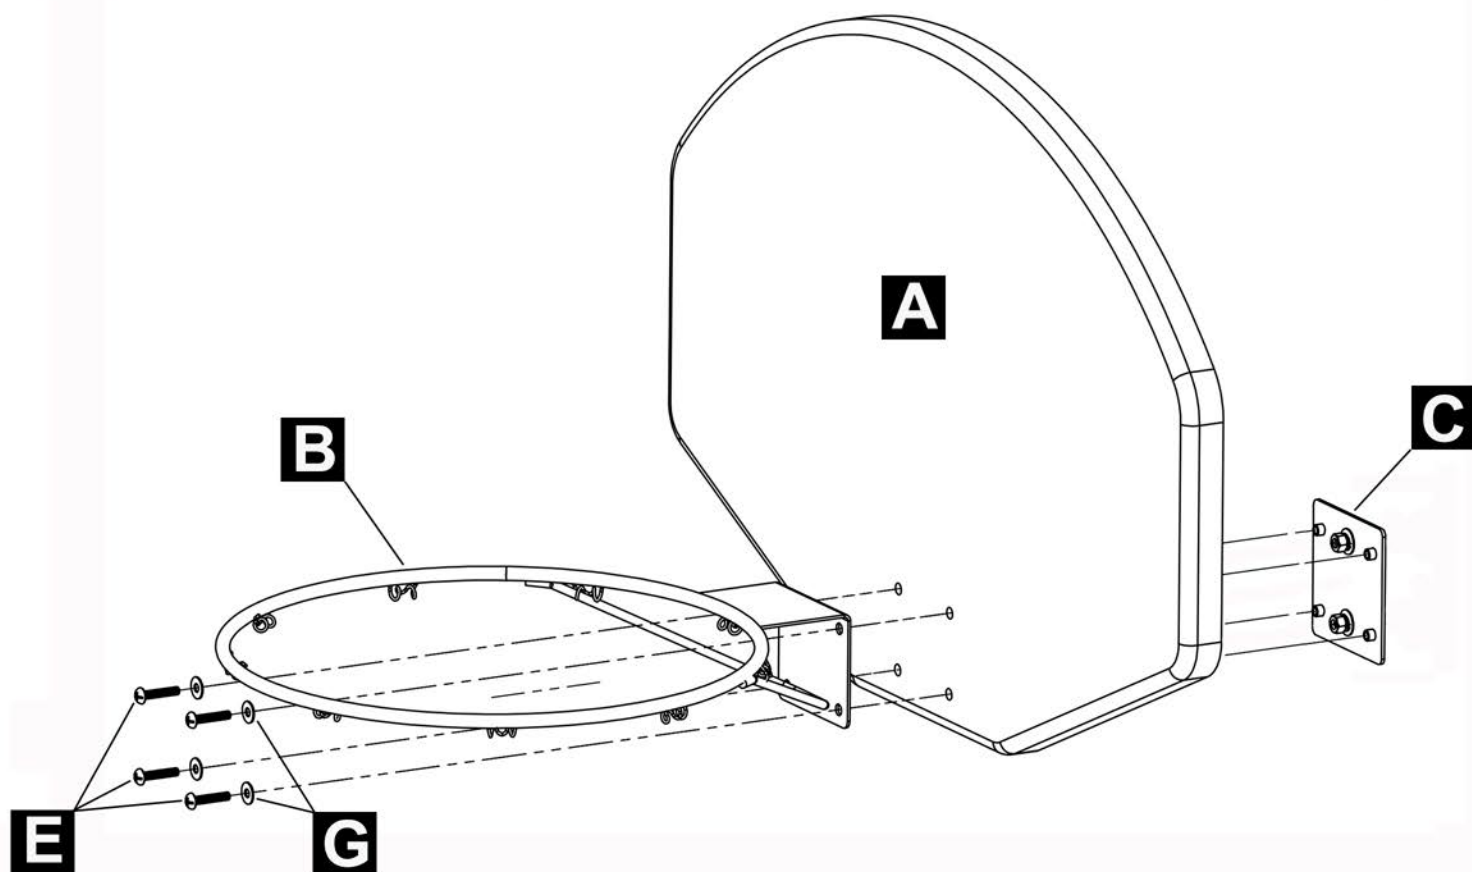


Step 3: Securing the backboard to the wall

- 1) Position the wall brackets (D) on either side of the backboard and mark the hole positions through the bracket with a marker pen. Drill holes into the wall with a 10 mm drill bit. Insert two anchor bolts (F) into the wall.
- 2) Slide the bracket (D) into position and secure using two anchor bolts (F).

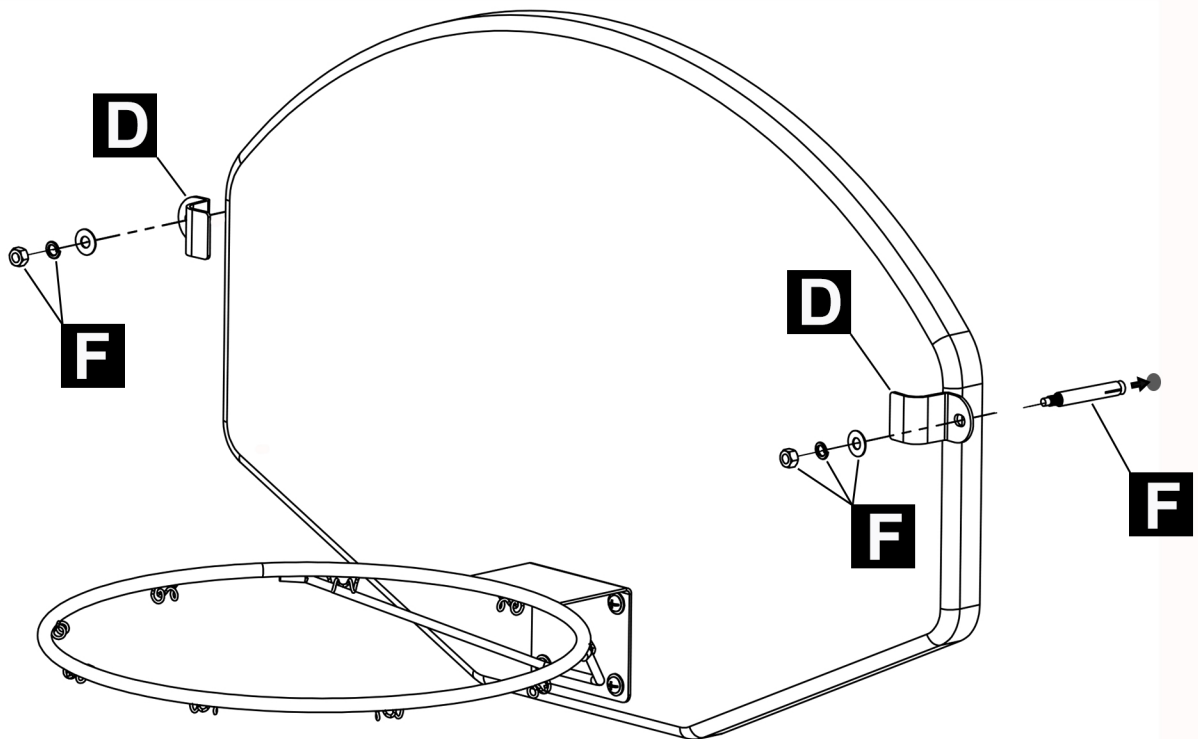


Step 4: Attaching the net

1) Attach the net (H) to the net hooks (B) of the goal.

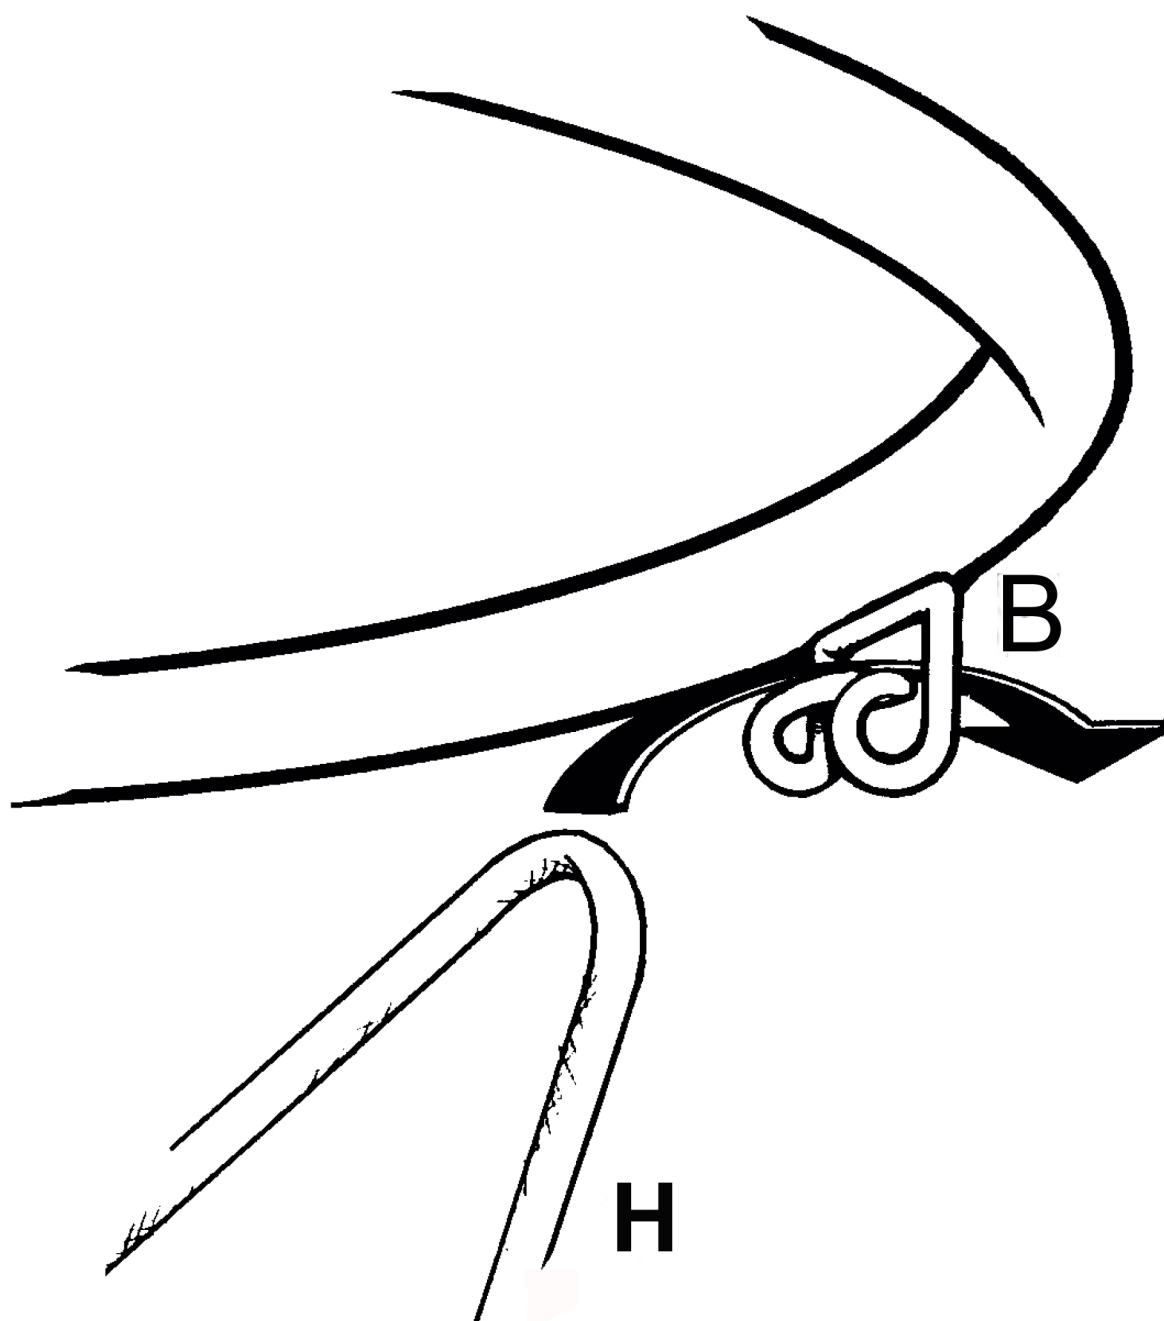

WARNING:

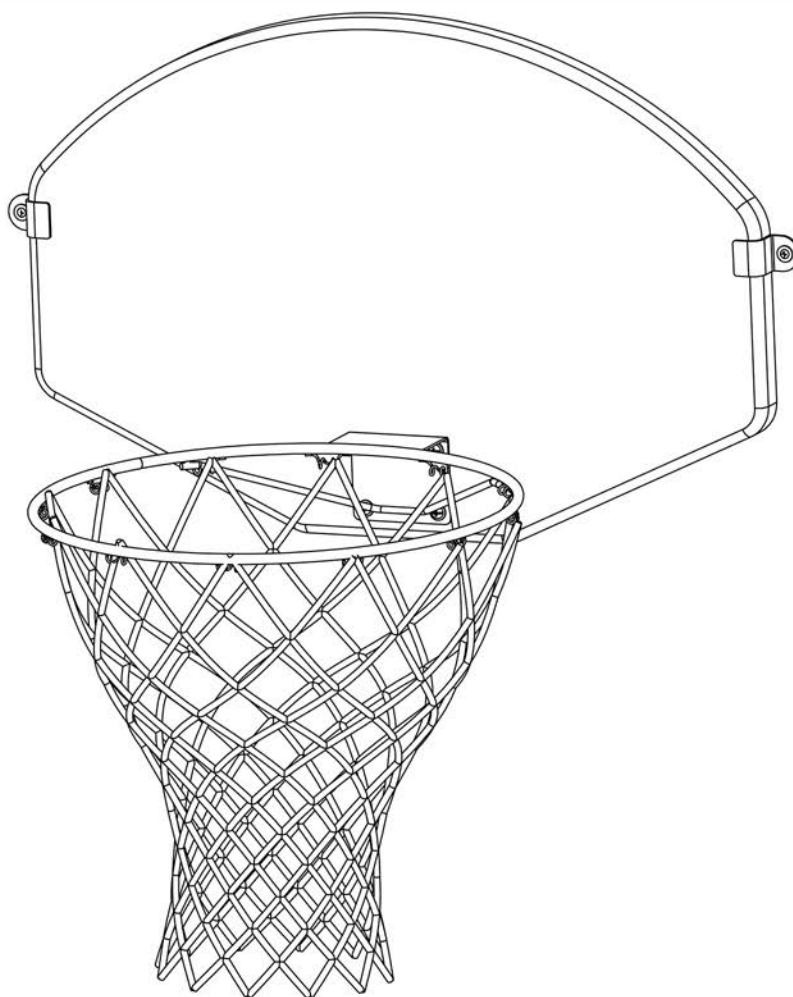

WARNING!

To ensure your safety, do not attempt to assemble the basketball system set without reading and following all instructions carefully.

Identify and check the parts using the parts list.

HANGING FROM THE RIM WILL DAMAGE THE UNIT, VOID THE WARRANTY AND RESULT IN PERSONAL INJURY. THE PRODUCT IS NOT DESIGNED FOR THIS TYPE OF USE.

REQUIRES ASSEMBLY BY AN ADULT.